

Meter reading for PGL2035 – PGL2040 – PGL2050

Please press Menu button Shown Below



Using the Down Arrow button go to Counter

Please Press the right arrow button or the OK button to continue



Meter reading for PGL2035 – PGL2040 – PGL2050

The Machines Meter count will be in this display as shown below

